



**SHERWOOD  
SCUBA®**

## **SERVICE INSTRUCTIONS**



**GEMINI BREATHABLE INFLATOR  
SR9000**

## **INTRODUCTION**

The instructions set forth in this document are intended to guide the experienced scuba equipment repair technician through the standard service procedure for the Gemini Breathable Inflator (Gemini).

It is assumed that the technician possesses basic scuba equipment repair training and the skill necessary to perform the service. If you have not received regulator service training as an Authorized Sherwood Scuba Dealer do not attempt to perform the service described in this document. If you are uncertain as to whether you are qualified to perform this service contact your regional Sherwood Scuba Distributor for advice.

## **GENERAL INSTRUCTIONS**

### **Special Notations**



**WARNING:** Indicates a potentially hazardous condition or situation which, if not avoided, may result in serious injury or death.



**CAUTION:** Indicates a potentially hazardous condition or situation which, if not avoided, may result in minor injury. It may also be used to alert against unsafe practices.



**NOTE:** Indicates an important point or reminder.

### **When to service**

Generally the Gemini should be inspected for service at least annually. If the regulator has been subjected to less than 200 hours of use it may just require a routine inspection not necessarily requiring the replacement of parts.

If the regulator has been subjected to more than 200 hours of use or it has not received the benefit of careful post-dive cleaning and storage in a clean environment, the regulator should receive standard service. Standard service includes cleaning, inspection for damaged parts, replacement of certain seals and the valve seat, reassembly and adjustments.

Gemini units that are subjected to extreme conditions such as daily use or infrequent cleaning may need service more frequently depending on inspection results.

Sherwood Scuba offers a standard service kit (P/N 9000-PK) that contains the parts that should be replaced at the standard service interval.

Use only authorized parts and lubricants. Substitution of parts and or lubricants may cause the product not to perform as intended by the manufacturer and will void the warranty.

## **General Procedure**

The Gemini Breathable Inflator is a multifunctional device for use with a standard buoyancy compensator. The Gemini replaces the standard inflator and combines in the same unit an alternate second stage regulator.

Servicing the Gemini is similar to the service procedures for a standard BC inflator and a standard second stage regulator. There are three functional modules within the Gemini consisting of the oral inflator, power inflator and demand valve. It is recommended that these be serviced in the order presented.

### **Separate the Gemini from the BC**

1. Snip the two plastic tie wraps that secure the Gemini to the BC airway hose taking care not to puncture the hose.



*Cut with wire pliers.*

2. Separate the hose from the Gemini body to expose the wire loop. Push the retaining pin (32) out sufficiently to slip the wire off the pin, separate the Gemini from the BC and set the BC aside.

### **Disassembly of the Gemini**

In order to simplify reassembly, keep the components removed from each module separated for easy identification.

#### **Power Inflator**

1. Locate the power inflator valve cap (8) on the backside of the Gemini and unthread it using needle nose pliers to apply torque to the cap. Inspect the cap o-ring (6) and remove any sand or other deposits that might be present. If it is necessary to remove the o-ring to clean it, use a soft tool such as a plastic or wooden pick to avoid damage to the sealing surfaces on the cap.



*Use needle nose pliers.*

2. Remove the Power Inflator Poppet (7) using a flat blade screwdriver. Remove and discard the poppet seal o-ring (4).



*Use small flat blade screwdriver.*

3. Slide the Power Inflator stem out of the body. Remove and discard the shaft seal, o-ring (4).



*Use needle nose pliers.*

4. Remove the Power Inflator Retainer (5) using needle nose pliers to apply torque. Remove and clean the static seal (6). Set aside for reassembly.

## **Oral Inflator**

1. Locate and remove the Exhaust Valve Cover (17). You should be able to torque the cover sufficiently using your fingers, but if necessary pliers with padded jaws (taped) may be used to gently remove the cover.
2. Lift out the Exhaust Valve Assembly (15&16). It is not necessary to remove the Exhaust Valve (16) from the Exhaust Valve Base. Simply clean any deposits from the valve surfaces and inspect it for damage. Replace the valve if it is damaged.
3. Use a 1/4" nut driver to remove the lock nut (14). Set aside the locknut and washer for reassembly.
4. Remove the Oral Inflator Seal (13) and wipe clean to remove any deposits. If the seal is damaged replace it. It is normal for a seating ring (depression) to be present. This should not be mistaken for damage.
5. Remove the Oral Inflator Button and stem. Remove and discard the Oral Inflator shaft seal, o-ring (12). Set aside Spring (10) and Washer (11) for reassembly.

## **Demand Valve Assembly**

1. Remove the Gemini cover (31) as follows: Inspect the rim of the cover on the backside of the Gemini to locate the small opening provided to allow insertion of a small screw driver.



*Locate notch in cover and use a small flat blade screwdriver.*

2. With the tip of the screwdriver inserted approximately  $\frac{1}{2}$  inch under the rim of the cover and against the outside perimeter of the Housing (1), slide the screwdriver tip toward the small end of the cover until it can be pushed up and through the vent hole in the cover. The tip of the blade should extend above the surface of the cover by at least 1 inch.



*Slide blade 90° as shown.*

3. Pry upward with the screwdriver handle and the rim of the cover will disengage the housing.



*Gently pry.*

4. Lift out the Diaphragm Retainer (30) and Diaphragm (29).

5. Locate the male end of the quick-connect portion of the installed Regulator Valve Body (20) and use a flat blade screwdriver to lift and remove the Retaining Ring Cover (18)



*Use small flat blade screwdriver.*

6. Remove the Retaining Ring (19) using a flat blade screw driver to pry the Retaining Ring radially outward.
7. The Demand Valve Assembly will now slide out of the Housing with a gentle push against the end of the male quick-connect.
8. Separate the Demand Valve Assembly by loosening the threaded connection between the Lever Support (26) and the Regulator Valve Body (20).
9. At this point the Regulator Poppet (24), Regulator Spring (25), Demand Lever (27), Lock nut (14), Washer (28) and Lever Support (26) will remain together as a subassembly. If this subassembly is free of deposits and allows the Poppet to move freely when the Demand Lever is actuated, it is not necessary to further disassemble. However the subassembly should be flushed and rinsed and the L.P. Seat should be removed and discarded.
10. If the presence of deposits requires further disassembly of the Demand Valve for adequate cleaning, use a ¼" nut driver to remove the lock nut.



**Note: The Demand Valve is spring loaded. Be prepared for sudden release and separation of the parts when the lock nut is removed.**

11. Inspect the Regulator Valve Body seals, o-rings (6) for deposits. Clean as necessary. Replace damaged seals.
12. Inspect the Seat Crown for damage to the seating surface. Nicks or gouges on the seating surface indicate damage. If damage is present it cannot be repaired and must be replaced. Remove and discard o-ring (21). Clean the Seat Crown of any deposits and set aside for reassembly.
13. Inspect the mouthpiece (34) for signs of damage. It must be free of cuts and nicks that might allow water to pass between the mouthpiece and the housing when installed. It is not necessary to remove the mouthpiece for cleaning if it is undamaged. If replacement is necessary, snip and discard the tie wrap to remove.

## **Cleaning**

1. Unless the Gemini has been subjected to harsh conditions cleaning generally may be accomplished with a soft brush and soapy warm water. Be certain to rinse completely with fresh water. Prolonged exposure to soap residue can be damaging to seals.
2. The Gemini housing material has been selected for its properties that resist adhesion of deposits but if mineral deposits become difficult to remove you may soak the rigid synthetic and metallic parts (everything except the o-ring seals) in a dilute acidic solution comprised of 50 % white vinegar and 50% water. Use of ultrasonic cleaning solutions should not be necessary. If such solutions are deemed necessary, to accelerate cleaning be certain to verify with the solution supplier that it is compatible with respiratory equipment.

## Reassembly



**Note: All o-ring seals should be cleaned and then lightly lubricated with Crysto-Lube MCG 111 before installation. Dow Corning 111 Silicone Grease is an acceptable substitute, but the use of silicone spray and other lubricants should be avoided.**

### Oral Inflator

1. Install the Oral Inflator shaft seal (12) in the housing and cover with Washer (11)
2. Install spring (10) and Oral Inflator Button by gently passing the stem through the shaft seal.
3. Install the Oral Inflator Seal with the conical surface facing toward the housing. Install Washer (28) and secure with the lock nut (14) Finger tight is sufficient.
4. Install the Exhaust Valve Assembly (15&16). If these parts were separated be certain to fully engage the Exhaust Valve stem in the Exhaust Valve Base by stretching and pulling the tail of the valve stem as it is inserted in the base. Test the valve by gently pulling in the opposite direction of installation to be certain it is securely retained.
5. Install the Exhaust Valve Cover finger tight.

### Power Inflator

1. Install the static seal (6) in the housing and secure by inserting the Power Inflator Retainer (5). Use needle nose pliers to torque finger tight.
2. Install a new shaft seal (4) onto the Power Inflator (2) stem. Be certain that the seal is located in the groove on the stem.




*Slide o-ring over shaft and seat in groove.*

3. Install the spring (3) and pass the Oral Inflator stem through the housing.



- Place the poppet seal, o-ring (4) over the threaded end of the Power Inflator Poppet (7). It is not necessary to seat the o-ring in the Poppet. This will occur when the Power Inflator is fully assembled. Assemble the Power Inflator Poppet onto the stem. Finger tight is sufficient.

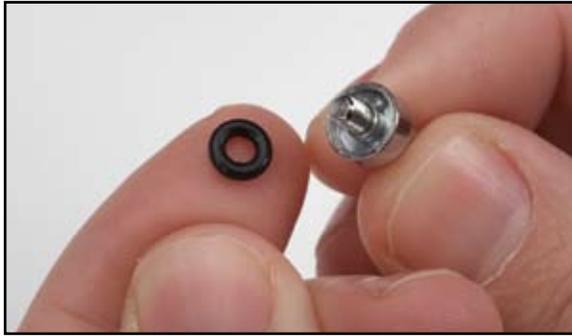

- Replace the static seal, o-ring (6) on the Power Inflator Valve Cap and thread the cap into the housing. Use needle nose pliers to fasten hand tight.

## **Demand Valve Reassembly**

***If the Demand Valve Subassembly was further disassembled for cleaning, reassemble as follows:***

- Use the Regulator Valve Body (20) as a fixture to aid with the insertion of the Regulator Poppet (24) into the Lever Support (26). Place the Valve Body on a flat surface with the quick connect end projecting upward.
- Place the Spring (25) and the Regulator Poppet (24) in the Lever Support (26) and compress this combination against the Valve Body, taking care to align the square feature on the Poppet with the square hole in the Lever Support. Continue to compress the Spring until the threads of Regulator Poppet project sufficiently to allow the Demand Lever (27), Washer (28) and the Lock Nut (14) to be installed. Install the Lock nut just enough to hold the assembly together with the threads even with the outer surface of the Lock nut. The lock nut will be tightened further during final adjustment.



*Install lever curved end towards lever support index*

- Note that the curvature of the Demand Lever is toward the indexing tab on the Lever Support when correctly oriented.

***If the Demand Valve Subassembly was left in tact for cleaning, proceeds as follows:***

- Install the o-ring (21) on the Seat Crown (22) and install the Seat Crown into the Regulator Valve Body.
- Install a new L.P. Seat (23) into the Regulator Poppet (24).
- Join the Lever Support to the Regulator Valve Body threading together until finger tight.

4. Replace o-rings (6) on the Regulator Valve Body.
5. Install the Demand Valve Subassembly into the housing making certain that the indexing tab on the Lever Support aligns with the mating feature in the Housing. Press together until the Demand Valve Subassembly is fully seating and the groove for accepting the Retaining Ring is clearly visible.
6. Replace the Retaining Ring (19) in the groove on the Valve Body to secure it in the housing.
7. Replace the Retaining Ring Cover (18) using a blunt tool to seat it fully against the housing.

## **Regulator Adjustments**

1. The Gemini must be supplied with intermediate pressure before the demand lever height can be properly adjusted.
2. Inspect the Gemini supply hose with the quick-connect fitting (35) for evidence of damage before applying pressure. Slide the hose protector back at the first stage end of the hose to inspect the hose near the fitting. If the hose is cut or torn it should be replaced.
3. If the hose was removed from the first stage, inspect the o-ring at the threaded end of the hose for damage. Replace damaged o-rings. Connect the hose to a low pressure port on the first stage and torque hand tight (approximately 40 in-lbs)
4. Connect the first stage to an air supply and apply at least 500 PSI. Check the hose for leaks. If there is leakage from the quick-connect fitting refer to Appendix A for instruction.
5. The Gemini is designed to operate with an intermediate pressure of 125 to 155 PSI. If you suspect that the first stage coupled with the Gemini supplies an intermediate pressure outside this range then the first stage should be serviced or replaced.
6. Connect the Gemini to the supply hose. This may be done with or without pressure applied to the hose.
7. Use a ¼" nut driver to rotate the Lock Nut clockwise adjusting the demand lever upward until all of the play between the Lever and the Poppet Assembly is removed. Do not tighten beyond this point as this will preload the valve assembly and may cause it to leak when the regulator is completely assembled. The demand Lever should align with the surface of the Housing and not fall more than 1/8" inch this point. If the Demand Lever is above the surface of the housing or more than 1/8" below it, the Demand Lever is distorted or improperly installed. Replace if distorted.
8. If the Poppet does not fully seat (slight leak), disconnect the supply hose and use a 3/16" hex wrench to adjust the Seat Crown (22). Access to the Seat Crown is through the quick-connect end of the Regulator Valve Body. Adjust to advance the Seat Crown forward by rotating it ¼ turn. Reconnect the hose to apply pressure. If leakage persists repeat above procedure and rotate Seat Crown inward an additional ¼ turn. Do not adjust further. If leakage persists, the cause is likely from a damaged seating surface on the Seat Crown, a damaged surface on the L.P. Seat or an intermediate pressure greater than 155 PSI. Readjust the Lock Nut to remove play.



*Lever height adjustment even with edge of housing*

9. Inspect the Diaphragm (29) for pin holes or other damage. Replace if any damage is present.
10. Install the Diaphragm into the Housing and install the Diaphragm Retainer (3).
11. Orient the Cover (12) so that the logo is properly aligned when viewing the face of the regulator with the mouthpiece at the left.
12. Match the groove in the cover with the rib on the outside of the Housing and snap the cover into place. Starting at the small end of the cover and advancing toward the opposite end simplifies this procedure.
13. Operate the Power Inflator and Oral Inflator buttons to verify the system operates without leakage.
14. Replace the mouthpiece if it was removed securing with a cable tie.
15. Reinstall the Gemini on the BC airway using reverse procedure from removal. Secure with two tie wraps.

## **INSPECTION**

Operate the oral inflator to check for opening and resealing.

1. Connect the supply hose to apply intermediate pressure to the Gemini, Operate the power inflator to verify that it will inflate and return to the closed position without leaking. Submerge the Gemini to check for leakage.
2. Attach the Gemini to the BC airway using the reverse procedure of removal and secure with two cable ties. Be certain that loop in the airway cable engages the pin at the end of the Gemini. Test the power inflator again to observe inflation of the BC. Deflate the BC by pulling the cable to operate the valve at the upper end of the airway. Note some model BCs may not have the cable operated valve feature.


## **APPENDIX**

### Gemini Hose with Quick-Connect

The Gemini hose is not included in the standard service procedure because it seldom requires attention. If a leak in the hose assembly is detected the hose may be serviced as follows:

1. Remove the Quick-Connect fitting from the hose using two wrenches to separate the assembly. Remove and replace the o-ring (part number 010B) in the swivel end of the hose fitting using a wooden or plastic pick to avoid damage to the metallic sealing surfaces.
2. Join the Quick-Connect to the hose fitting using two wrenches to secure. Torque to approximately 40 in-lbs or hand tight.
3. Apply pressure to the hose and check for leaks. Generally the replacement of the o-ring as described in Step 2 will resolve leakage. If leakage has not been resolved the internal seals in the Quick-Connect fitting may be the cause. Further service to the Quick-Connect requires return to your Regional Distributor.

# Gemini Breathable Inflator

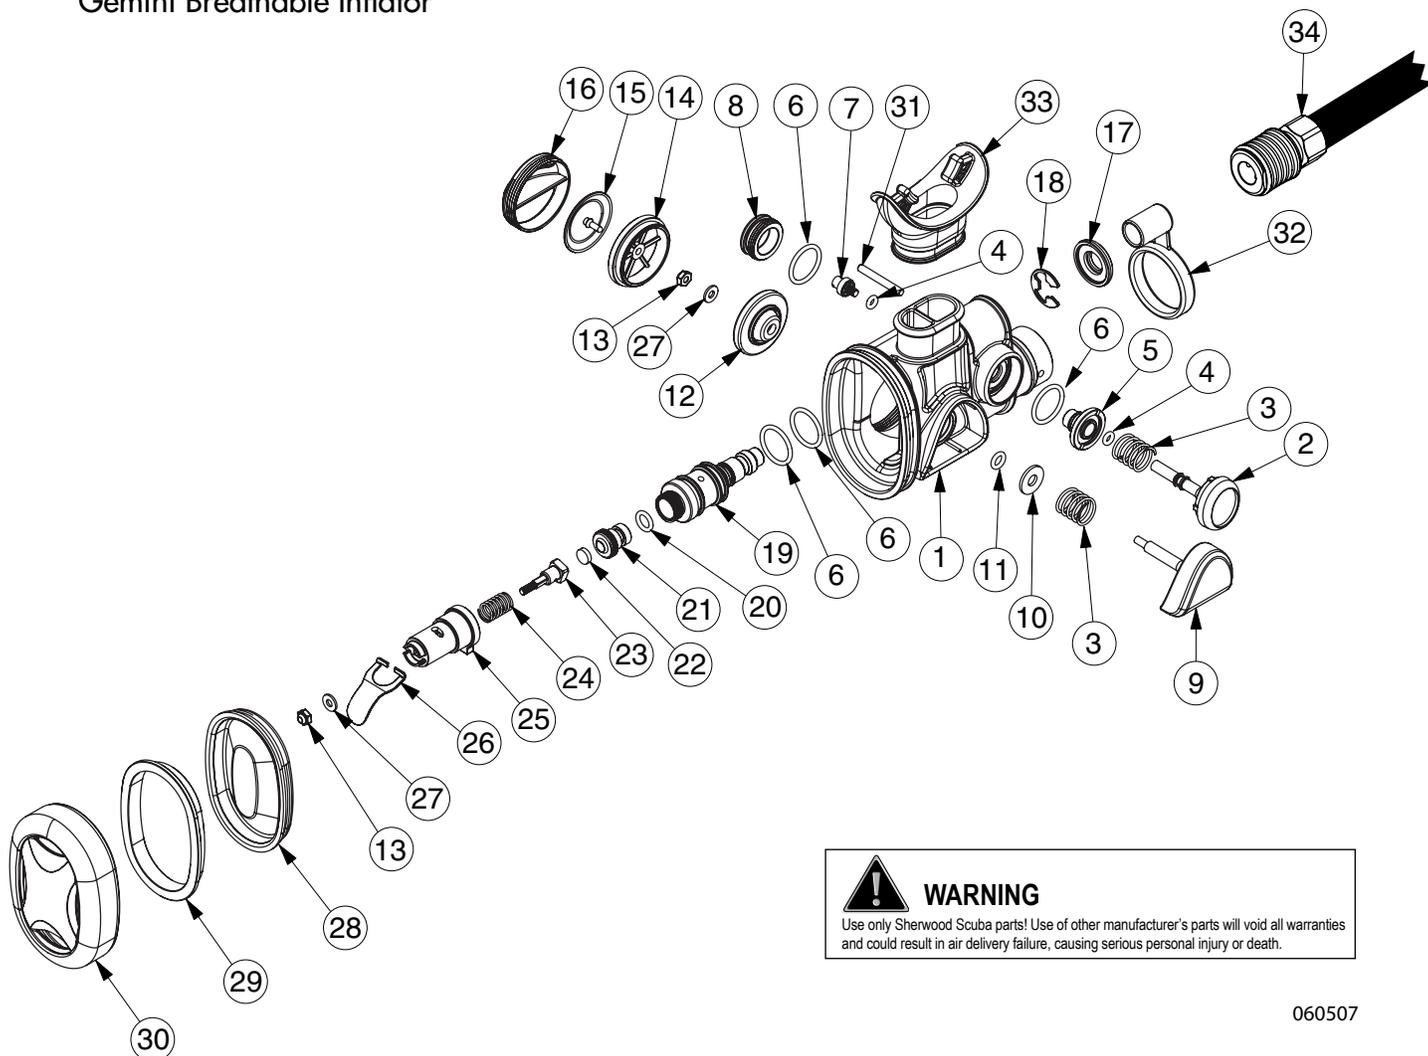

**WARNING**  
 Use only Sherwood Scuba parts! Use of other manufacturer's parts will void all warranties and could result in air delivery failure, causing serious personal injury or death.

060507

ITEM	PART #	DESCRIPTION
1	9000-1	Housing
2	9000-2	Power Inflator Button Assembly
3	9000-52	Power Inflator Spring
4	006B	O-ring
5	9000-22	Power Inflator Retainer
6	016B	O-ring
7	9000-21	Power Inflator Poppet
8	9000-7	Power Inflator Valve Cap
9	9000-3	Oral Inflator Button
10	9000-11	Oral Inflator Washer
11	008B	O-ring
12	9000-35	Oral Inflator Seal
13	9000-47	Lock Nut
14	9000-4	Exhaust Valve Base
15	9000-32	Exhaust Valve
16	9000-5	Exhaust Valve Cover
17	9000-24	Retaining Ring Cover
18	9000-46	Retaining Ring

ITEM	PART #	DESCRIPTION
19	9000-8	Regulator Valve Body
20	010B	O-ring
21	9000-17	Seat Crown
22	9000-22	L.P. Seat
23	9000-19	Regulator Poppet
24	9000-51	Regulator Spring
25	9000-6	Lever Support
26	9000-37	Demand Lever
27	9000-9	Washer
28	9000-33	Diaphragm
29	9000-13	Diaphragm Retainer
30	9000-12	Cover
31	9000-49	Retaining Pin
32	9000-36	Quick Connect Cap
33	9000-34	Mouthpiece
34	9000-60	Hose Assembly / Quick Connect
35		Cable Tie (not shown)

**PETER SKOP INDUSTRIES**

6161 Atlantic Blvd.  
Norcross · Georgia 30071  
Toll Free: 800-774-4447  
TL: 770-449-4141  
Toll Free FX: 800-849-4774  
FX: 770-242-0683

**DIVERSCO**

495 Conestoga Blvd.  
Cambridge · Ontario N1R 7P4  
Toll Free: 800-650-0061  
TL: 519-740-1210  
Toll Free FX: 877-264-3920  
FX: 519-740-9051

**CRAMER DECKER INDUSTRIES**

1641 E. St. Andrew Place  
Santa Ana · California 92705  
Toll Free: 800-347-9766  
TL: 714-566-3820  
: 714-566-3839

